

MAINTENANCE KIT INSTRUCTIONS

For Use in HP 2200

This printer maintenance kit provides you with the most commonly used parts that wear on the HP 2200. Replacing these worn parts will allow for maximum paper feed along with quality print performance.

THE FOLLOWING PARTS ARE INCLUDED IN THIS MAINTENANCE KIT

PART #	DESCRIPTION	QUANTITY
RG5-5559	2200 FUSER ASSEMBLY	1
RG5-5281	2200 TRANSFER ROLLER	1
RB2-2900	2200 T1 PICKUP ROLLER	1
RB2-6304	2200 T2 & T3 PICKUP ROLLER	1
RF5-3272	2200 T1 SEP PAD	1
RB2-6349	2200 T2 & T3 SEP PAD	1

WARNING

TURN PRINTER OFF, UNPLUG IT, THEN ALLOW PRINTER TO SIT FOR AT LEAST 30 MINUTES BEFORE PERFORMING MAINTENANCE PROCEDURES

Please refer to your HP Laser Jet Service Manual
For more info on proper installation of kit parts



Buy Smart. Waste Less. Save More!!

Although you are not required, please do your part.

Recycle this product – Help keep America clean.

WARNING

TURN PRINTER OFF, UNPLUG IT, THEN ALLOW PRINTER TO SIT FOR AT LEAST 30 MINUTES BEFORE PERFORMING MAINTENANCE PROCEDURES

Fusing Assembly Removal & Installation:

1. Remove Dimm cover and Rear door cover.
2. Facing the back of the printer, Disconnect the wire harnesses – The left wire pulls straight out – The right, press a flat head screw driver on the connector and pull straight out.
3. Remove the two grounding plate screws next to the harnesses.
4. Remove the two screws that fasten the fuser to the printer on left and right side of fuser.
5. Remove the fuser assembly.
6. Install replacement fuser in reverse fashion.

*****WARNING*****

**USE LATEX GLOVES WHEN REPLACING THE TRANSFER ROLLER
** DO NOT TOUCH THE BLACK FOAM ROLLER****

Transfer Roller Replacement:

1. ***DO NOT TOUCH BLACK FOAM WITH YOUR BARE SKIN – OIL CAN DAMAGE ROLLER***
2. Open toner cartridge door and remove cartridge – locate transfer roller
3. Locate the transfer rollers black bushing located on the left side of the shaft just behind gear.
4. Squeeze both of the black bushing's tabs and lift the transfer roller out.
5. Reverse for installation.

Tray 1 Pick Up Roller / Separation Pad Removal & Replacement:

1. REMOVE THE FOLLOWING –
Toner cartridge – dimm cover – rear cover – top cover – left cover – tray 1.
2. Rotate the left idler roller until the release mechanism is accessible.
3. Press and hold down the separation pad while holding the release button – slide idler roller to the left then repeat for the Right Idler roller.
4. Press and hold the release mechanism for the pickup roller and slide it to the right – rotate the roller downward and remove.
5. To rotate the separation pad forward – simultaneously lift it up and to the left
6. Squeeze both brackets to remove the pad from the swing - remove
7. Reverse for installation.

Tray 2 Delivery Roller/ Separation Pad Removal & Replacement:

NOTE: **** IF TRAY 3 IS INSTALLED - LIFT THE PRINTER OFF OF TRAY3****

1. Remove the toner cartridge and tray 2.
2. Place the printer top down with the infrared port facing forward
****Be careful not to scratch the printer****
3. Tilting the lever to the left, rotate the white bushing until the tab is aligned with the opening on the carriage and slide the white bushing to the left.
4. Tilting the white lever to the left – Rotate the black bushing on the right and remove – you may need to use needle nose pliers with this process.
5. Slide the pickup roller to the right and remove.
6. Reuse the 2 plastic roller/spacers
7. Reverse for installation

****Note – make sure to rotate the bushing and roller until it locks into place****

Reset the Maintenance Page Count: (plug in and leave power off)

To reset the maintenance page count - press and hold down the JOB CANCEL

Key's while turning the printer on – release the button after the LED's come on.

NOTE: **** DO NOT HOLD THE JOB CANCEL DOWN FOR MORE THEN 20 SECONDS AFTER THE LED's LIGHT UP – THIS WILL PUT THE PRINTER BACK TO A FACTORY SETTING****